

Specifications sheet

Your quiet space for undisturbed meetings and deep work

Tuesday booths are built to the highest standards, ensuring the best sound insulation and noise reduction.

With Tuesday booths, you can be sure of a peaceful and productive work environment, no matter how noisy your surroundings may be.

Tuesday



Product features

Ventilation Air flow at 78 m³/hr refreshing air every two minutes.



Recycled materials approx ≥180kg $(12m^2/0.66m^3)$ each.

	E
	1
	*
-	Г

Passive Lightning *4000k (150Lx) Daylight LED lighting **Dimmable Directional**

Strip Task Light.



Door System



Electrical

Wall-mounted: UL/CE 220-240v power socket (UK or EU), 2x USB, 1x USB-C. *Energy Saving Motion Sensor Control.



Leading The Sound Pod Industry

Leading the Sound Pod Industry STC 30 dB & RT0.25s NIC=25dB D/C50, 0.76 STI A+

Work Desk


Designed ergonomically for meetings or working on laptop.



Sofa

Designed ergonomically for meetings or working on laptop.

Product Specifications

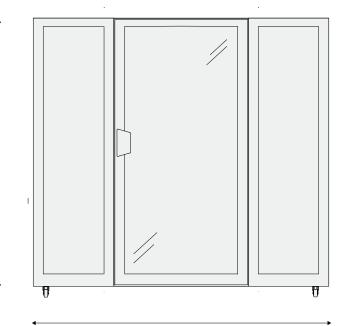

W 220cm (ext.) / 210cm (int.)

Exterior:

2200w x 1220d x 2200h

Interior: 2100w x 1100d x 2100h

Capacity:

1-4 people

Weight: 459kg (Pod+Furniture)

Power requirements:

Equipped with a directional task lighting bar and singular UL/CE 220-240v power socket (UK or EU) 2x USB, 1x USB-C.

Sound/NIC rating:

Leading the Sound Pod Industry STC 30 dB & RT0.25s NIC=25dB D/C50, 0.76 STI A+

Airflow

78 m³/hr. Refreshing air every two minutes guaranteeing excellent oxygen rates.

Projected area

0.99m





Material

Carbon acoustic plate, PET acoustic plate, Polyester lacoustic fiber, Aluminum, Stainless steel, ABS plastic.

Safety

Fire Rated Foam

Emergency Safety Hammer included for internal fitting.

UK Fire foam where required.







Modern Applications:

Lights, Power, Action! Within the Tuesday booth sits a mini sofa, cushioned for comfort but primarily for support, complimented by an organically curved task desk. Equipped with a directional task lighting bar and singular UL/CE 220-240v power socket (UK or EU) with 2 * USB and 1 * USB-C will power the devices required. The PIR sensor will help save on power, automatically turning off after 5mins of not being occupied.

Sound isolating double walls:

Our booths maintain a Rw+Ctr 30db (+5 db) by utilizing a market leading double walled technology.

Passive Lighting:

Tuesday booth also has non-directional main *4000k (150Lx) Daylight LED lighting, offering a comfortable, well aired environment.

Air flow technology:

Replacing the air regularly within the Tuesday booth helps the occupant feel fresh and comfortable and surrounds them with fresh oxygen every 2 minutes, promoting health and wellbeing.

Flexible and movable:

Tuesday booth can be moved in minutes; lower the levelling legs allowing the castors to take over and move where ever you want!

Tuesday





USER MANUAL



READ BEFORE START

PRODUCT INTRODUCTION

* Dear customer, Thanks for choosing our product, please mind these tips below during the installation:

1. Four people should be prepared for the installation;

2. Please use cushioning material for stacking parts after unboxing in case of damaging the floor or product;

3. Please don't scratch any part with a sharp tool;

4. Please check all listed tools are prepared; 5. Please check the space for installation is sufficient;

6. Please follow the step by number to build.

SCAN FOR ASSEMBLY VIDEO:



GETTUESDAY.CO

* Input power: 100-220V~50/60Hz * Output power: 100-220V~50/60Hz、5V 2.1A * Maximum power: 1000W


Ambient light: 3.5W、170LM、4000k
Reading light: 3W、4000K

	Main part Upholstery Code Description Oty Previous						Dol Tool				铰 Accessory				
÷				Code	Description	Qty.	Preview	Code	Description	Qty.	Preview	Code	Description	Qty.	Preview
<u>نې</u>				B-01	Left wall	1		E-01	Perforation socket wrench	1	ETT O	D-01	Caster	40	
			Tool									D-02	Bolt	45	a de la constante de la consta
Main p	Description	Qty.	Preview	B-02	Right wall	1		E-02	Double head screwdriver	1		D-03	Eccentric wheel	45	B
A-01	Bottom panel	1					~	E-03	M6 hex key wrench	1		D-04	Level	1	TE
A-02	Left side penal	1		B-03	Rear wall (L)	1		E-04	M4 hex key wrench	1		D-05	Power cable	1	
r\-UZ	Left side panel	1		B-04	Middle rear wall (Upper)	1	$\langle \rangle$	E-05	M3 hex key wrench	1		D-06	Door handles	2	
A-03	Right side panel	1						음 Fur	riture.			D-07	Air cushion	1	o C
A-04	Top panel	1	00	B-05	Middle rear wall (Lower)	1		Code	Description	Qty.	Preview	D-08	Reading light	1	0
A-05	Front frame (L)	1		B-06	Right rear wall	1		C-01	Sofa	2		D-09	M6x12mm Bolt	40	
												D-10	M4x16mm Bolt	12	anano
A-06	Glass door	1		B-07	Ceiling (L)	1		C-02	Desk	1		D-11	M6x20mm Bolt	7	
A-07	Front frame (R)	1		B-08	Ceiling (M)	1		C-03	Bracket	1		D-12	M6x30mm Bolt	3	
A-08	Rear panel (L)	1				т	0			-		D-13	M5x12mm Bolt	2	
A-09	Rear panel (M)	1		B-09	Ceiling (R)	1		C-04	Desk foot	1	\mathcal{O}	D-14	ST4x16mm Bolt	4	
	rtear parter (M)										A	D-15	ST3x25mm Bolt	2	
A-10	Rear panel (R)	1		B-10	Carpet	1		C-05	Desk leg	1	V	D-16	81.5x12x8mm Bolt	2	


ණි Acce	ssory		
Code	Description	Qty.	Preview
D-01	Caster	40	S.S.
D-02	Bolt	45	350
D-03	Eccentric wheel	45	Ð
D-04	Level	1	TIN
D-05	Power cable	1	C.
D-06	Door handles	2	(II (C)
D-07	Air cushion	1	
D-08	Reading light	1	Ø
D-09	M6x12mm Bolt	40	(G)

PRODUCT SPECS


- External size: W2200*1220*H2200mm
- Internal size: W2095*D1120*H1960mm
- Projected area: 2.86m² • Main material:
- Carbon plastic、PET、Aluminum、Stainless steel、ABS
- Furniture material:
- Birch plywood、Steel、Polyurethane、PET

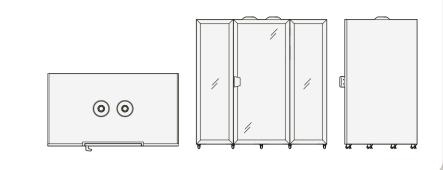



CIRCUIT DIAGRAM

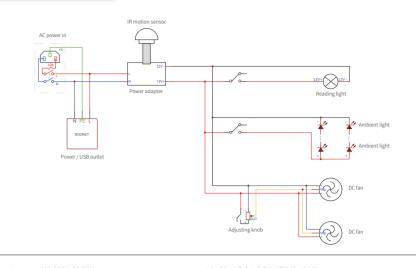



ASSENBLY INSTRUCTIONS

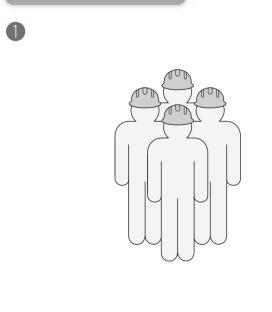


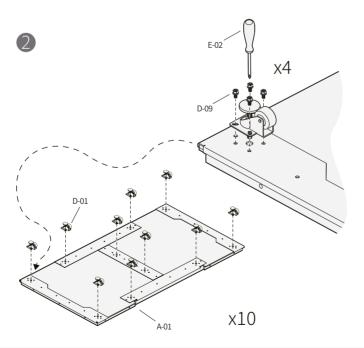


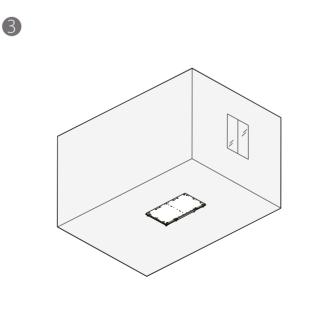


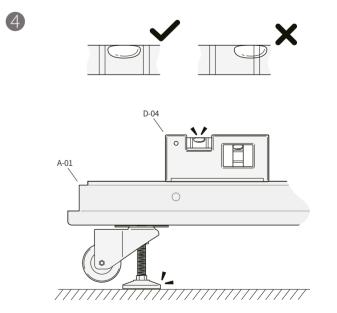


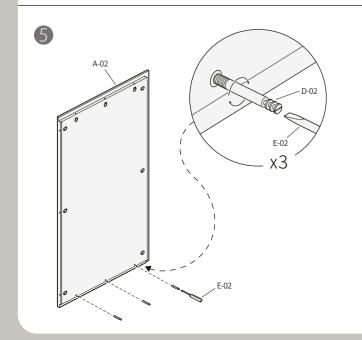

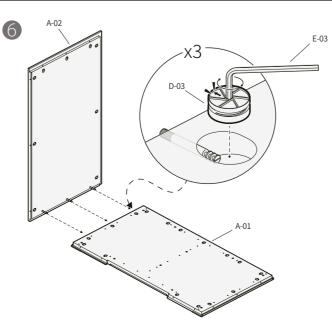

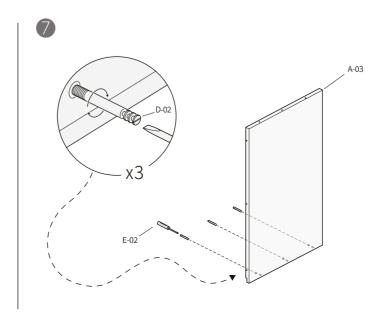

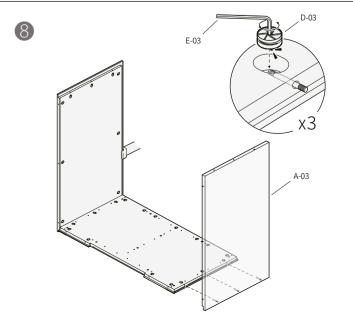

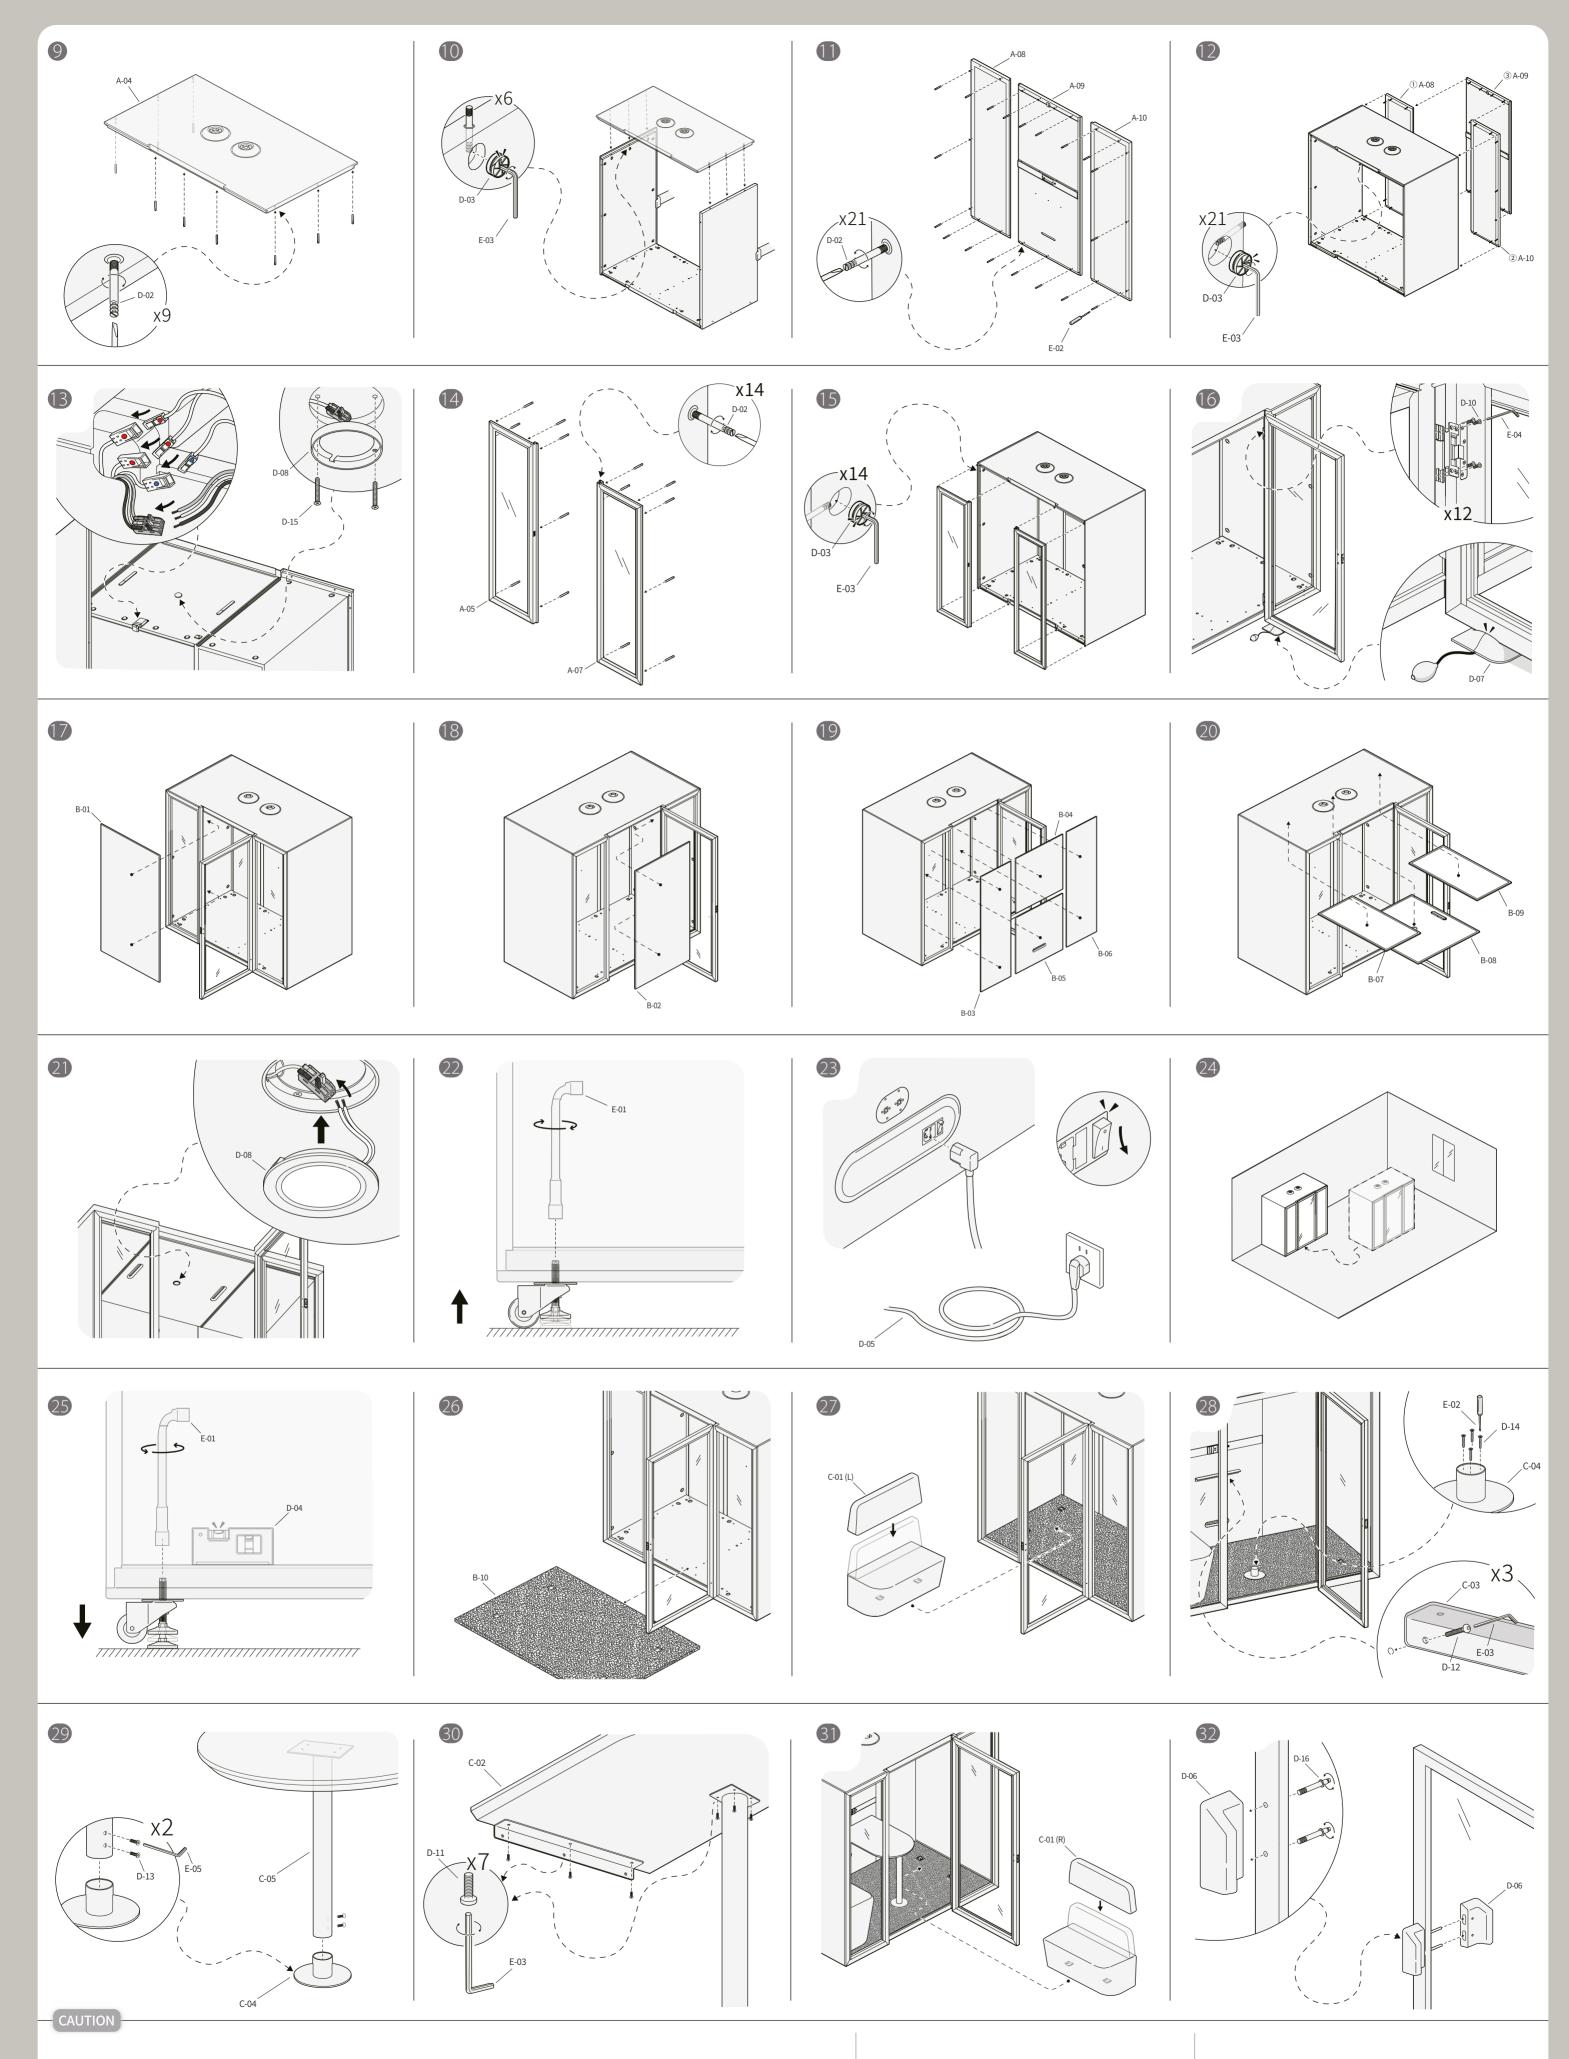

Warning

 Do not use any electronics exceeding 1000W in case of overload;
 Do not use the product if the ventilation channels are blocked, keep the ventilation channels free foreign objects and debris;
 Protect all electric hardware from damage that cause electrical leakage;

IDo not modify the original equiment in case of a short circuit;
IDo not scratch glass with any sharp object;
IDo not smoke or light fires in the pod;
IAlways set the caster to the non-moving state;
IDisconnect the power cord from the power outlet before starting any cleaning, maintenance, or disassembly procedures;

☆Do not use the product if the ventilation is not functioning;
☆Do not climbing on top of the product or place any load on the top of the product;
☆Do not use this product in an environment with oxygen concentration lower than 23.5%;
☆Do not slam the door;
☆Do not use this product outdoors.

Maintenance

★ Please contact authorized personnel for repairing, don't operate without official instruction;
★ Do not put anything heavier than 10kg on the desk;
★ Cut off the power supply if any malfunction occurs.

Problems and Solutions

In case of on power from the power outlets and the fan or lamp don't work.
Make sure the power cord is plugged in properly;
Check if the fuse is burnt out;
Check that the wire terminal is firmly connected to wire following the correct label.